

- Full component traceability
- Temperature cycling

Product# MQFL-28VE-09S

- Constant acceleration
- 24, 96, 160 hour burn-in
- Three level temperature screening

Phone 1-888-567-9596

www.SynQor.com

Doc.# 005-0005217 Rev. 3

• MIL-STD-1275 (B, D)


• MIL-STD-461 (C, D, E, F)

DEF-STAN 61-5 (part 6)/(5, 6)


RTCA/DO-160(E, F, G) Section 22




BLOCK DIAGRAM

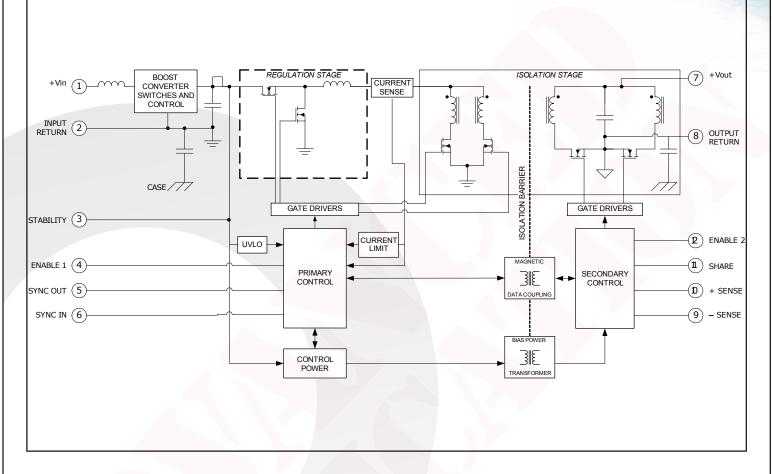

TYPICAL CONNECTION DIAGRAM

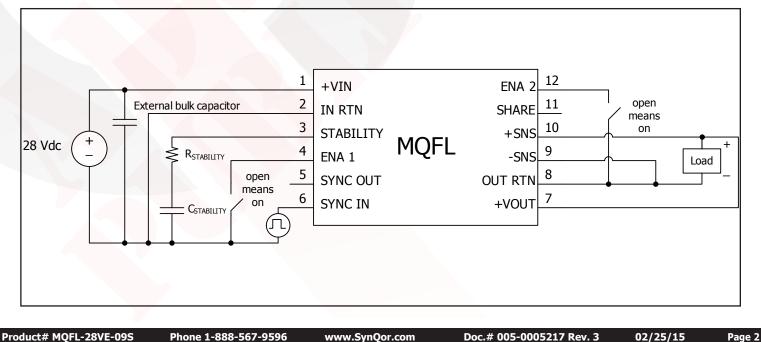

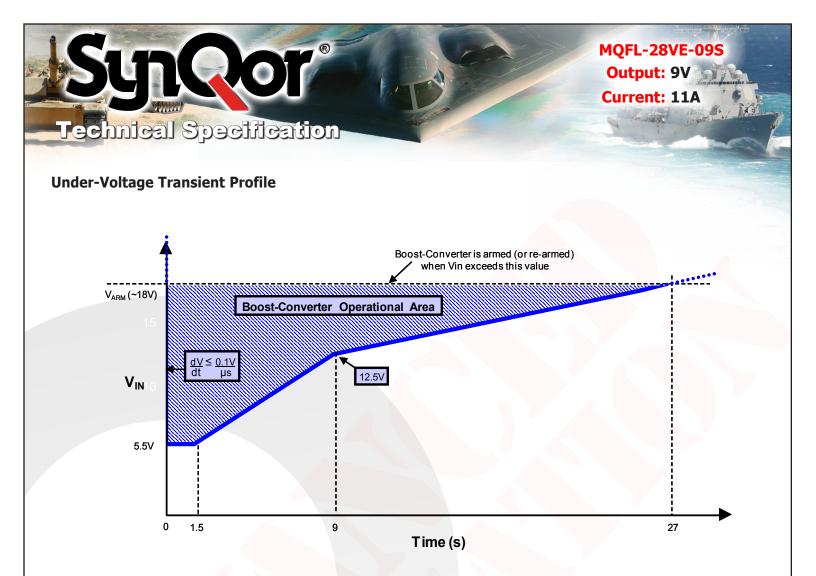

Under-Voltage Transient Profile showing when the boost-converter is guaranteed to be operational. Before the boost converter will operate, it must first be armed (or re-armed) by making V_{IN} greater than V_{ARM} .

Note:

This Under-Voltage Transient Profile is designed to comply (with appropriate margins) with all initial-engagement surges, starting or cranking voltage transients and under-voltage surges specified in:

- MIL-STD-704-8 (A through F)
- RTCA/DO-160
- MIL-STD-1275
- DEF-STAN 61-5 (part 6)/5 (operational portions)

UNICAL Space Highting

MQFL-28VE-09S Output: 9V

Current: 11A

Technical Specification

MQFL-28VE-09S ELECTR				CTE		The second second
Parameter	Min.			Unite	Notes & Conditions	Group A
Specifications subject to change without notice	•••••••	iyp.	I'IAX.	Units	Vin=28V dc \pm 5%, Iout=11A, CL=0 μ F, free running (see Note 10) boost-conv	erter Subgroup
					non-operational unless otherwise specified	Subgroup
ABSOLUTE MAXIMUM RATINGS Input Voltage						
Non-Operating			100	V		
Operating			100	V	See Note 1	
Reverse Bias (Tcase = 125°C)			-0.8	V V		
Reverse Bias (Tcase = -55°C) Isolation Voltage (I/O to case, I to O)			-1.2	V		
Continuous	-500		500	V		
Transient (≤100µs)	-800		800	V		
Operating Case Temperature	-55		125	°C	HB Grade Products, See Notes 2 & 16	
Storage Case Temperature Lead Temperature (20s)	-65		135 300	°C °C		
Voltage at ENA1, ENA2	-1.2		50	V		
INPUT CHARACTERISTICS						
Operating Input Voltage Range	16	28	70	V	Continuous	1, 2, 3
Input Under-Voltage Lockout	5.5	28	80	V	Transient 1s; see Under-Voltage Transient Profile See Note 3	
Turn-On Voltage Threshold	14.75	15.50	16.00	V		1, 2, 3
Turn-Off Voltage Threshold	13.80	14.40	15.00	V		1, 2, 3
Lockout Voltage Hysteresis	0.50	1.10	1.80	V		
Input Over-Voltage Shutdown	00.0	05.0	100.0		See Note 15	
Turn-Off Voltage Threshold Turn-On Voltage Threshold	90.0	95.0 86.0	100.0 90.0	V V		
Shutdown Voltage Hysteresis	3.0	9.0	15.0	V		
Maximum Input Current		5.0	7.5	Â	Vin = 16V; Iout = 11A	See Note 5
No Load Input Current (operating)		90	160	mA		1, 2, 3
Disabled Input Current (ENA1)		2	5	mA	Vin = 16V, 28V, 70V	1, 2, 3
Disabled Input Current (ENA2) Input Terminal Current Ripple (pk-pk)		25 80	50 120	mA mA	Vin = 16V, 28V, 70V Bandwidth = 100kHz – 10MHz; see Figure 14	1, 2, 3 1, 2, 3
OUTPUT CHARACTERISTICS		00	120			1, 2, 5
Output Voltage Set Point (Tcase = 25°C)	8.91	9.00	9.09	V	Vout at sense leads	1
Output Voltage Set Point Over Temperature	8.85	9.00	9.15	V		2, 3
Output Voltage Line Regulation Output Voltage Load Regulation	-20 35	0 45	20 55	mV mV	"; Vin = 16V, 28V, 70V; Iout=11A	1, 2, 3 1, 2, 3
Total Output Voltage Range	8.82	9.00	8.18	V	"; Vout @ (Iout=0A) - Vout @ (Iout=11A)	1, 2, 3
Output Voltage Ripple and Noise Peak to Peak	0.02	15	40	mV	Bandwidth = 10MHz; CL=11µF	1, 2, 3
Operating Output Current Range	0		11	A		1, 2, 3
Operating Output Power Range	0	12.5	100	W	Can Note 4	1, 2, 3
Output DC Current-Limit Inception Short Circuit Output Current	11.5 11.5	12.5 13	14 15	A	See Note 4 Vout $\leq 1.2V$	1, 2, 3 See Note 5
Back-Drive Current Limit while Enabled	11.5	3.3	15	A	Vout 3 1.2V	1, 2, 3
Back-Drive Current Limit while Disabled		10	50	mA		1, 2, 3
Maximum Output Capacitance			5,000	μF		See Note 5
DYNAMIC CHARACTERISTICS Output Voltage Deviation Load Transient					See Note 6	
For a Pos. Step Change in Load Current	-600	-350		mV	Total Iout step = $5.5A \leftrightarrow 11A$, $1.1A \leftrightarrow 5.5A$; CL= 11μ F	4, 5, 6
For a Neg. Step Change in Load Current		350	600	mV	W	4, 5, 6
Settling Time (either case)		100	200	μs	See Note 7	4, 5, 6
Output Voltage Deviation Line Transient For a Pos. Step Change in Line Voltage	-500		E00	m)/	Vin step = $16V <->50V$; CL= 11μ F; see Note 8	
For a Neg. Step Change in Line Voltage	-500		500	mV mV	n n	
Settling Time (either case)	500	250	500	μs	See Note 7	
Turn-On Transient				· ·		
Output Voltage Rise Time		6	10	ms	Vout = 0.9V->8.1V	4, 5, 6
Output Voltage Overshoot Turn-On Delay, Rising Vin		0	2 8.0	%	ENA1. ENA2 = 5V; see Notes 9 & 12	See Note 5
Turn-On Delay, Rising Vin Turn-On Delay, Rising ENA1		3.0	6.0	ms ms	ENA1, $ENA2 = 5V$; see Note $59 & 12ENA2 = 5V; see Note 12$	4, 5, 6 4, 5, 6
Turn-On Delay, Rising ENA2		1.5	3.0	ms	ENA1 = 5V; see Note 12	4, 5, 6
EFFICIENCY						
Iout = 11A (16Vin)		89		%		
Iout = 5.5A (16Vin) Iout = 11A (28Vin)	TBD	90 89		%		1, 2, 3
Iout = 5.5A (28Vin)		90		%		1, 2, 3
Iout = 11A (40Vin)		87		%		
Iout = 5.5A (40Vin)		89		%		
Iout = 11A (70Vin)		86		%		
Load Fault Power Dissipation		14	24	W	Iout at current limit inception point; See Note 4	1, 2, 3
Short Circuit Power Dissipation		16	24	W	Vout $\leq 1.2V$	1, 2, 3

Product# MQFL-28VE-09S

MQFL-28VE-09S

Output: 9V

Current: 11A

Technical Specification

MOFL-28VE-09S ELECTRICAL CHARACTERISTICS (Continued) Min. | Typ. | Max. | Units | Notes & Conditions Parameter **Group A** Vin=28V dc \pm 5%, Iout=11A, CL=0 μ F, free running (see Note 10) boost-converter non-operational unless otherwise specified Specifications subject to change without notice Subgroup **ISOLATION CHARACTERISTICS Isolation Voltage** Dielectric strength Input RTN to Output RTN 500 ٧ 1 Any Input Pin to Case 500 V 1 Any Output Pin to Case 500 ٧ 1 Isolation Resistance (in rtn to out rtn) 100 MO 1 Isolation Resistance (any pin to case) 100 MΩ 1 Isolation Capacitance (in rtn to out rtn) 44 nF 1 FEATURE CHARACTERISTICS Switching Frequency (free running) 500 550 600 kHz 1, 2, 3 Synchronization Input **Frequency Range** 500 600 kHz 1, 2, 3 Logic Level High 2.0 10 V 1, 2, 3 0.8 V Logic Level Low -0.5 1, 2, 3 Duty Cycle 20 80 % See Note 5 Synchronization Output Pull Down Current 20 mΑ VSYNC OUT = 0.8VSee Note 5 25 % Output connected to SYNC IN of other MQFL unit See Note 5 Duty Cycle 75 Enable Control (ENA1 and ENA2) **Off-State Voltage** 0.8 V 1, 2, 3 Module Off Pulldown Current 80 μA Current drain required to ensure module is off See Note 5 **On-State Voltage** 2 ٧ 1, 2, 3 Module On Pin Leakage Current 20 μΑ Imax draw from pin allowed with module still on See Note 5 4.0 Pull-Up Voltage 3.2 4.5 See Figure A 1, 2, 3 **BOOST-CONVERTER OPERATION** Input Voltage Arming Value 17.5 18.0 18.8 V 1, 2, 3 Switching Frequency 600 740 670 kHz 1 Input Terminal Current Ripple (RMS) 0.9 Vin = 16V; Iout = 11AА Total Converter Efficiency Iout = 15A (10Vin)86 % 1 Iout = 15A (16Vin)88 % Iout = 30A (16Vin)88 % 1 **RELIABILITY CHARACTERISTICS** Calculated MTBF (MIL-STD-217F2) GB @ Tcase = $70^{\circ}C$ 2200 103 Hrs. AIF @ Tcase = 70°C 390 103 Hrs. WEIGHT CHARACTERISTICS Device Weight 79 g

Electrical Characteristics Notes

1. Converter will undergo input over-voltage shutdown.

2. Derate output power for continuous operation per Figure 5. 135°C is above specified operating range.

3. High or low state of input voltage must persist for about 200µs to be acted on by the lockout or shutdown circuitry.

4. Current limit inception is defined as the point where the output voltage has dropped to 90% of its nominal value.

5. Parameter not tested but guaranteed to the limit specified.

6. Load current transition time $\geq 10 \mu s$.

7. Settling time measured from start of transient to the point where the output voltage has returned to $\pm 1\%$ of its final value.

8. Line voltage transition time \geq 100µs.

9. Input voltage rise time $\leq 250 \mu s$.

10. Operating the converter at a synchronization frequency above the free running frequency will cause the converter's efficiency to be slightly reduced and it may also cause a slight reduction in the maximum output current/power available. For more information consult the factory.

11. SHARE pin outputs a power failure warning pulse during a fault condition. See Current Share section of the Control Features description.

12. After a disable or fault event, module is inhibited from restarting for 300ms. See Shut Down section of the Control Features description. 13. Only the ES and HB grade products are tested at three temperatures. The C- grade products are tested at one temperature. Please refer to the

13. Only the ES and HB grade products are tested at three temperatures. The C- grade products are tested at one temperature. Please refer to the Construction and Environmental Stress Screening Options table for details.


14. These derating curves apply for the ES and HB grade products. The C- grade product has a maximum case temperature of 70°C.

15. Input Over Voltage Shutdown test is run at no load, full load is beyond derating condition and could cause damage at 125°C.

16. The specified operating case temperature for ES grade products is -45°C to 100°C. The specified operating case temperature for C- grade products is 0°C to 70°C.

MQFL-28VE-09S Output: 9V

Current: 11A

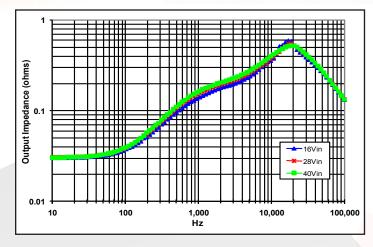

Technical Figures

Figure 19: Magnitude of incremental output impedance (Zout = vout/iout) for minimum, nominal, and maximum input voltage at full rated power.

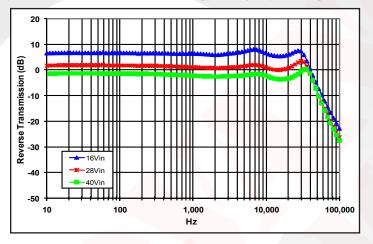


Figure 21: Magnitude of incremental reverse transmission (RT = iin/iout) for minimum, nominal, and maximum input voltage at full rated power.

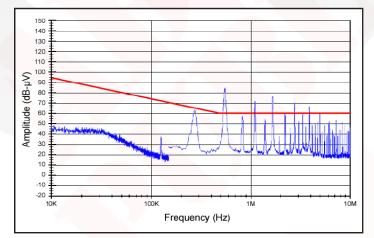


Figure 23: High frequency conducted emissions of standalone MQFL-28-05S, 5Vout module at 120W output, as measured with Method CE102. Limit line shown is the 'Basic Curve' for all applications with a 28V source.

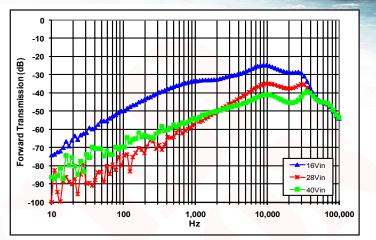


Figure 20: Magnitude of incremental forward transmission (FT = vout/vin) for minimum, nominal, and maximum input voltage at full rated power.

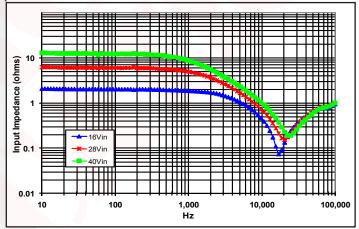


Figure 22: Magnitude of incremental input impedance (Zin = vin/iin) for minimum, nominal, and maximum input voltage at full rated power.

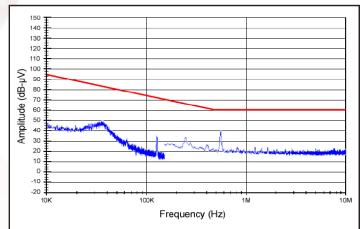


Figure 24: High frequency conducted emissions of MQFL-28-05S, 5Vout module at 120W output with MQFL-28-P filter, as measured with Method CE102. Limit line shown is the 'Basic Curve' for all applications with a 28V source.



BASIC OPERATION AND FEATURES

The MQFL DC/DC converter uses a two-stage power conversion topology. The first, or regulation, stage is a buck-converter that keeps the output voltage constant over variations in line, load, and temperature. The second, or isolation, stage uses transformers to provide the functions of input/output isolation and voltage transformation to achieve the output voltage required.

In the MQFL-28VE series of converters the regulation stage is preceeded by a boost-converter that permits these converters to operate through various Military and Aircraft under-voltage transients. Further discussion of this feature can be found later in these notes.

Both the regulation and the isolation stages switch at a fixed frequency for predictable EMI performance. The isolation stage switches at one half the frequency of the regulation stage, but due to the push-pull nature of this stage it creates a ripple at double its switching frequency. As a result, both the input and the output of the converter have a fundamental ripple frequency of about 550 kHz in the free-running mode.

Rectification of the isolation stage's output is accomplished with synchronous rectifiers. These devices, which are MOSFETs with a very low resistance, dissipate far less energy than would Schottky diodes. This is the primary reason why the MQFL converters have such high efficiency, particularly at low output voltages.

Besides improving efficiency, the synchronous rectifiers permit operation down to zero load current. There is no longer a need for a minimum load, as is typical for converters that use diodes for rectification. The synchronous rectifiers actually permit a negative load current to flow back into the converter's output terminals if the load is a source of short or long term energy. The MQFL converters employ a "back-drive current limit" to keep this negative output terminal current small.

There is a control circuit on both the input and output sides of the MQFL converter that determines the conduction state of the power switches. These circuits communicate with each other across the isolation barrier through a magnetically coupled device. No opto-isolators are used.

A separate bias supply provides power to both the input and output control circuits. Among other things, this bias supply permits the converter to operate indefinitely into a short circuit and to avoid a hiccup mode, even under a tough start-up condition.

An input under-voltage lockout feature with hysteresis is provided, as well as an input over-voltage shutdown. There is also an output current limit that is nearly constant as the load impedance decreases to a short circuit (i.e., there is not fold-back or fold-forward characteristic to the output current under this condition). When a load fault is removed, the output voltage rises exponentially to its nominal value without an overshoot.

The MQFL converter's control circuit does not implement an output over-voltage limit or an over-temperature shutdown.

The following sections describe the use and operation of additional control features provided by the MQFL converter.

UNDER-VOLTAGE TRANSIENTS

The MQFL-28VE series of DC/DC converters incorporate a special "boost-converter" stage that permits the converters to deliver full power through transients where its input voltage falls to as low as 5.5V. Normally, the boost-converter is non-operational, and the converter's input voltage is passed directly to its pre-regulation stage (see the Block Diagram). When an under-voltage transient occurs, the boost-converter becomes operational, and it steps-up the input voltage to a value greater than 16V so that the nominal output voltage can be sustained.

It is important to note that the boost-converter stage must first become "armed" before it can become operational. This "arming" occurs when the converter's input voltage exceeds approximately 18V. The boost-converter then becomes operational whenever the input voltage drops below the arming voltage, and it will remain operational as long as the input voltage remains within the region shown in the Under-Voltage Transient Profile Page. If the input voltage drops below this transient profile, the boost- converter stage is not guaranteed to continue operating (it may, but it will protect itself from excessive stresses). Once the boost- converter stops operating, the converter's input voltage will be reconnected directly to the input of the pre-regulator stage. The output voltage will therefore collapse unless the input voltage is 16V, or greater.

Note: the boost-converter will not become re-armed for the next transient unless the input voltage once again exceeds approximately 18V.

The transient profile shown on the Under-Voltage Transient Profile page is designed to comply (with appropriate margins) with all initial-engagement surges, starting or cranking voltage transients, and under-voltage surges specified in:

- MIL-STD-704-8 (A through F)
- RTCA/DO-160
- MIL-STD-1275
- DEF-STAN 61-5 (Part 6)/5 (operational portions)

Any input voltage transient that fits within the Under-Voltage Transient Profile can be repeated after a delay that is at least four times longer than the duration of the previous transient.

During the time when the boost-converter stage is operational, the converter's efficiency is reduced and the input ripple cur-



rent is increased. The lower the input voltage, the more these parameters are affected.

Usually the converter has an EMI filter upstream of it, and the source voltage is connected to the input of this EMI filter. When, during compliance testing, the source voltage goes low during an under-voltage transient, the input to the converter will go even lower. This is because the inductance of the EMI filter (as well as the parasitic source inductance) will cause an oscillatory ring with the bulk capacitor. With the bulk capacitor that is present in an MQME-28 filter, the peak of this under-voltage ring may be approximately 2 volts if the source voltage drops to 6V (it will be smaller than this at a higher transient source voltage due to the lower current drawn by the converter). As a result, it is necessary to add extra bulk capacitor across the converter's input pins if the source voltage is going to drop to 6V, as it does for MIL-STD-704(A) or MIL-STD-1275D. It is recommended that a 100µF/0.25W ESR capacitor be connected across the input pins of the converter be used as a starting point. For MIL-STD-704(B-F), where the source voltage drops to only 7V, a 47µF hold-up capacitor would be a good starting point. The exact amount of capacitance required depends on the application (source induc- tance, load power, rate of fall of the source voltage, etc). Please consult the factory if further assistance is required.

Because input system stability is harder to maintain as the input voltage gets lower, the MQFL-28VE series converters are designed to give external access to the voltage node between the boost-con- verter and the pre-regulator stages. This access, at the "STABILITY" pin (pin 3), permits the user to add a stabilizing bulk capacitor with series resistance to this node. Since the voltage at this node stays above 16V, the amount of capacitance required is much less than would be required on the converter's input pins where the voltage might drop as low as 5.5V. It is recommended that a 22µF capacitor with an ESR of about 1 Ω be connected between the STABILITY pin and the INPUT RETURN pin (pin 2). Without this special connection to the internal node of the converter, a 300µF stabilizing bulk capacitor would have been required across the converter's input pins.

Another advantage of the STABILITY pin is that it provides a volt- age source that stays above 16V when the under-voltage transient occurs. This voltage source might be useful for other circuitry in the system.

CONTROL FEATURES

ENABLE: The MQFL converter has two enable pins. Both must have a logic high level for the converter to be enabled. A logic low on either pin will inhibit the converter.

The ENA1 pin (pin 4) is referenced with respect to the converter's input return (pin 2). The ENA2 pin (pin 12) is referenced with respect to the converter's output return (pin 8). This permits the converter to be inhibited from either the input or the output side.

Regardless of which pin is used to inhibit the converter, the regulation and the isolation stages are turned off. However, when the converter is inhibited through the ENA1 pin, the bias supply is also turned off, whereas this supply remains on when the converter is inhibited through the ENA2 pin. A higher input standby current therefore results in the latter case.

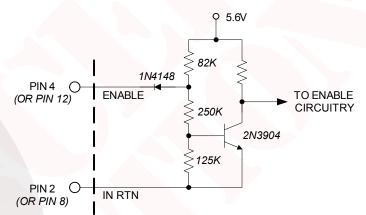


Figure A: Circuit diagram shown for reference only, actual circuit components may differ from values shown for equivalent circuit.

Both enable pins are internally pulled high so that an open connection on both pins will enable the converter. Figure A shows the equivalent circuit looking into either enable pins. It is TTL compatible.

SHUT DOWN: The MQFL converter will shut down in response to only four conditions: ENA1 input low, ENA2 input low, VIN input below under-voltage lockout threshold, or VIN input above over-voltage shutdown threshold. Following a shutdown event, there is a startup inhibit delay which will prevent the converter from restarting for approximately 300ms. After the 300ms delay elapses, if the enable inputs are high and the input voltage is within the operating range, the converter will restart. If the VIN input is brought down to nearly 0V and back into the operating range, there is no startup inhibit, and the output voltage will rise according to the "Turn-On Delay, Rising Vin" specification.

REMOTE SENSE: The purpose of the remote sense pins is to correct for the voltage drop along the conductors that connect the converter's output to the load. To achieve this goal, a separate conductor should be used to connect the +SENSE pin (pin 10) directly to the positive terminal of the load, as shown in the connection diagram on Page 2. Similarly, the –SENSE pin (pin 9) should be connected through a separate conductor to the return terminal of the load.

NOTE: Even if remote sensing of the load voltage is not desired, the +SENSE and the -SENSE pins must be connected to +Vout (pin 7) and OUTPUT RETURN (pin 8), respectively, to get proper



regulation of the converter's output. If they are left open, the converter will have an output voltage that is approximately 200mV higher than its specified value. If only the +SENSE pin is left open, the output voltage will be approximately 25mV too high.

Inside the converter, +SENSE is connected to +Vout with a resistor value from 100Ω to 301Ω , depending on output voltage, and -SENSE is connected to OUTPUT RETURN with a 10Ω resistor.

It is also important to note that when remote sense is used, the voltage across the converter's output terminals (pins 7 and 8) will be higher than the converter's nominal output voltage due to resistive drops along the connecting wires. This higher voltage at the terminals produces a greater voltage stress on the converter's internal components and may cause the converter to fail to deliver the desired output voltage at the low end of the input voltage range at the higher end of the load current and temperature range. Please consult the factory for details.

SYNCHRONIZATION: The MQFL converter's regulation and isolation stage switching frequencies can be synchronized to an external frequency source that is in the 500 kHz to 600 kHz range. The boost-converter stage is free-running at about 670 kHz while it is operational, and is not affected by synchronization signals. A pulse train at the desired frequency should be applied to the SYNC IN pin (pin 6) with respect to the INPUT RETURN (pin 2). This pulse train should have a duty cycle in the 20% to 80% range. Its low value should be below 0.8V to be guaranteed to be interpreted as a logic low, and its high value should be above 2.0V to be guaranteed to be interpreted as a logic high. The transition time between the two states should be less than 300ns.

If the MQFL converter is not to be synchronized, the SYNC IN pin should be left open circuit. The converter will then operate in its free-running mode at a frequency of approximately 550 kHz.


If, due to a fault, the SYNC IN pin is held in either a logic low or logic high state continuously, the MQFL converter will revert to its free-running frequency.


The MQFL converter also has a SYNC OUT pin (pin 5). This output can be used to drive the SYNC IN pins of as many as ten (10) other MQFL converters. The pulse train coming out of SYNC OUT has a duty cycle of 50% and a frequency that matches the switching frequency of the converter with which it is associated. This frequency is either the free-running frequency if there is no synchronization signal at the SYNC IN pin, or the synchronization frequency if there is.

The SYNC OUT signal is available only when the voltage at the STABILITY pin (pin 3) is above approximately 12V and when the converter is not inhibited through the ENA1 pin. An inhibit through the ENA2 pin will not turn the SYNC OUT signal off.

NOTE: An MQFL converter that has its SYNC IN pin driven by the SYNC OUT pin of a second MQFL converter will have its start of its switching cycle delayed approximately 180 degrees relative to that of the second converter.

Figure B shows the equivalent circuit looking into the SYNC IN pin. Figure C shows the equivalent circuit looking into the SYNC OUT pin.

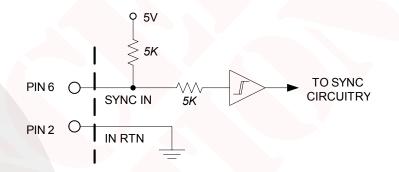

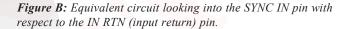

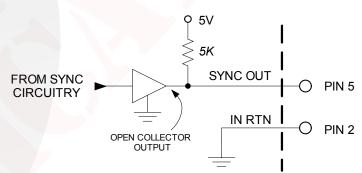


Figure C: Equivalent circuit looking into SYNC OUT pin with respect to the IN RTN (input return) pin.

CURRENT SHARE: When several MQFL converters are placed in parallel to achieve either a higher total load power or N+1 redundancy, their SHARE pins (pin 11) should be connected together. The voltage on this common SHARE node represents the average current delivered by all of the paralleled converters. Each converter monitors this average value and adjusts itself so that its output current closely matches that of the average.

Since the SHARE pin is monitored with respect to the OUTPUT RETURN (pin 8) by each converter, it is important to connect all of the converters' OUTPUT RETURN pins together through a low DC and AC impedance. When this is done correctly, the converters will deliver their appropriate fraction of the total load current to within +/-10% at full rated load.

MQFL-28VE-09S Output: 9V

Application Section

Whether or not converters are paralleled, the voltage at the SHARE pin could be used to monitor the approximate average current delivered by the converter(s). A nominal voltage of 1.0V represents zero current and a nominal voltage of 2.2V represents the maximum rated current, with a linear relationship in between. The internal source resistance of a converter's SHARE pin signal is 2.5 k Ω . During an input voltage fault or primary disable event, the SHARE pin outputs a power failure warning pulse. The SHARE pin will go to 3V for approximately 14ms as the output voltage falls.

NOTE: Converters operating from separate input filters with reverse polarity protection (such as the MQME-28-T filter) with their outputs connected in parallel may exhibit hiccup operation at light loads. Consult factory for details.

OUTPUT VOLTAGE TRIM: If desired, it is possible to increase the MQFL converter's output voltage above its nominal value. To do this, use the +SENSE pin (pin 10) for this trim function instead of for its normal remote sense function, as shown in Figure D. In this case, a resistor connects the +SENSE pin to the -SENSE pin (which should still be connected to the output return, either remotely or locally). The value of the trim resistor should be chosen according to the following equation or from Figure E:

Rtrim = 100 x Vout - Vnom - 0.025

where:

Vnom = the converter's nominal output voltage,

Vnom

Vout = the desired output voltage (greater than Vnom), and Rtrim is in Ohms.

As the output voltage is trimmed up, it produces a greater voltage stress on the converter's internal components and may cause the converter to fail to deliver the desired output voltage


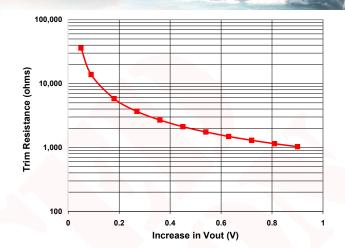


Figure E: Output Voltage Trim Graph

at the low end of the input voltage range at the higher end of the load current and temperature range. Please consult the factory for details.

INPUT UNDER-VOLTAGE LOCKOUT: The MQFL converter has an under-voltage lockout feature that ensures the converter will be off if the input voltage is too low. This lockout only appears when the boost-converter is not operating. The threshold of input voltage at which the converter will turn on is higher that the threshold at which it will turn off. In addition, the MQFL converter will not respond to a state of the input voltage unless it has remained in that state for more than about 200µs. This hysteresis and the delay ensure proper operation when the source impedance is high or in a noisy environment.

INPUT OVER-VOLTAGE SHUTDOWN: The MQFL converter also has an over-voltage feature that ensures the converter will be off if the input voltage is too high. It also has a hysteresis and time delay to ensure proper operation.

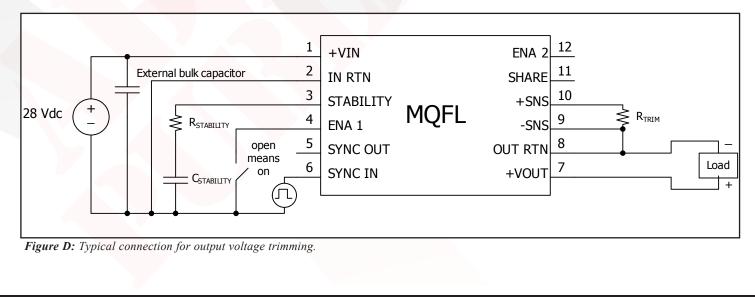

Page 10



BACK-DRIVE CURRENT LIMIT: Converters that use MOSFETs as synchronous rectifiers are capable of drawing a negative current from the load if the load is a source of short- or long-term energy. This negative current is referred to as a "back-drive current".

Conditions where back-drive current might occur include paralleled converters that do not employ current sharing, or where the current share feature does not adequately ensure sharing during the startup or shutdown transitions. It can also occur when converters having different output voltages are connected together through either explicit or parasitic diodes that, while normally off, become conductive during startup or shutdown. Finally, some loads, such as motors, can return energy to their power rail. Even a load capacitor is a source of back-drive energy for some period of time during a shutdown transient.

To avoid any problems that might arise due to back-drive current, the MQFL converters limit the negative current that the converter can draw from its output terminals. The threshold for this back-drive current limit is placed sufficiently below zero so that the converter may operate properly down to zero load, but its absolute value (see the Electrical Characteristics page) is small compared to the converter's rated output current.

THERMAL CONSIDERATIONS: Figure 5 shows the suggested Power Derating Curves for this converter as a function of the case temperature, input voltage and the maximum desired power MOSFET junction temperature. All other components within the converter are cooler than its hottest MOSFET.

The Mil-HDBK-1547A component derating guideline calls for a maximum component temperature of 105°C. Figure 5 therefore has one power derating curve that ensures this limit is maintained. It has been SynQor's extensive experience that reliable long-term converter operation can be achieved with a maximum component temperature of 125°C. In extreme cases, a maximum temperature of 145°C is permissible, but not recommended for long-term operation where high reliability is required. Derating curves for these higher temperature limits are also included in Figure 5. The maximum case temperature at which the converter should be operated is 135°C. When the converter is mounted on a metal plate, the plate will help to make the converter's case bottom a uniform temperature. How well it does so depends on the thickness of the plate and on the thermal conductance of the interface layer (e.g. thermal grease, thermal pad, etc.) between the case and the plate. Unless this is done very well, it is important not to mistake the plate's temperature for the maximum case temperature. It is easy for them to be as much as 5-10°C different at full power and at high temperatures. It is suggested that a thermocouple be attached directly to the converter's case through a small hole in the plate when investigating how hot the converter is getting. Care must also be made to ensure that there is not a large thermal resistance between the thermocouple and the case due to whatever adhesive might be used to hold the thermocouple in place.

INPUT SYSTEM INSTABILITY: This condition can occur because any DC/DC converter appears incrementally as a negative resistance load. A detailed application note titled "Input System Instability" is available on the SynQor website which provides an understanding of why this instability arises, and shows the preferred solution for correcting it.

CONSTRUCTION AND ENVIRONMENTAL STRESS SCREENING OPTIONS C-Grade **ES-Grade** HB-Grade **Consistent with** Screening specified from specified from specified from MIL-STD-883F 55 °C to +125 °C 0 °C to +70 °C 45 °C to +100 °C **Element Evaluation** No Yes Yes **Internal Visual** Yes Yes Yes **Condition B** Condition C **Temperature Cycle** Method 1010 No (-55 °C to +125 °C) (-65 °C to +150 °C) Method 2001 Condition A **Constant Acceleration** 500g No (Y1 Direction) (5000g) 24 Hrs @ +125 °C 96 Hrs @ +125 °C 160 Hrs @ +125 °C **Burn-in** Method 1015 **Final Electrical Test** Method 5005 (Group A) +25 °C -45, +25, +100 °C -55, +25, +125 °C Mechanical Seal, Thermal, and Full QorSeal Full QorSeal Full QorSeal **Coating Process External Visual** 2009 * Yes Yes **Construction Process** QorSeal QorSeal QorSeal * Per IPC-A-610 Class 3

MilQor converters and filters are offered in three variations of environmental stress screening options. All MilQor converters use SynQor's proprietary QorSealTM Hi-Rel assembly process that includes a Parylene-C coating of the circuit, a high performance thermal compound filler, and a nickel barrier gold plated aluminum case. Each successively higher grade has more stringent mechanical and electrical testing, as well as a longer burn-in cycle. The ESand HB-Grades are also constructed of components that have been procured through an element evaluation process that pre-qualifies each new batch of devices.


Product# MQFL-28VE-09S

Stress Screening

Phone 1-888<u>-567-9596</u>

www.SynQor.com

Page 12

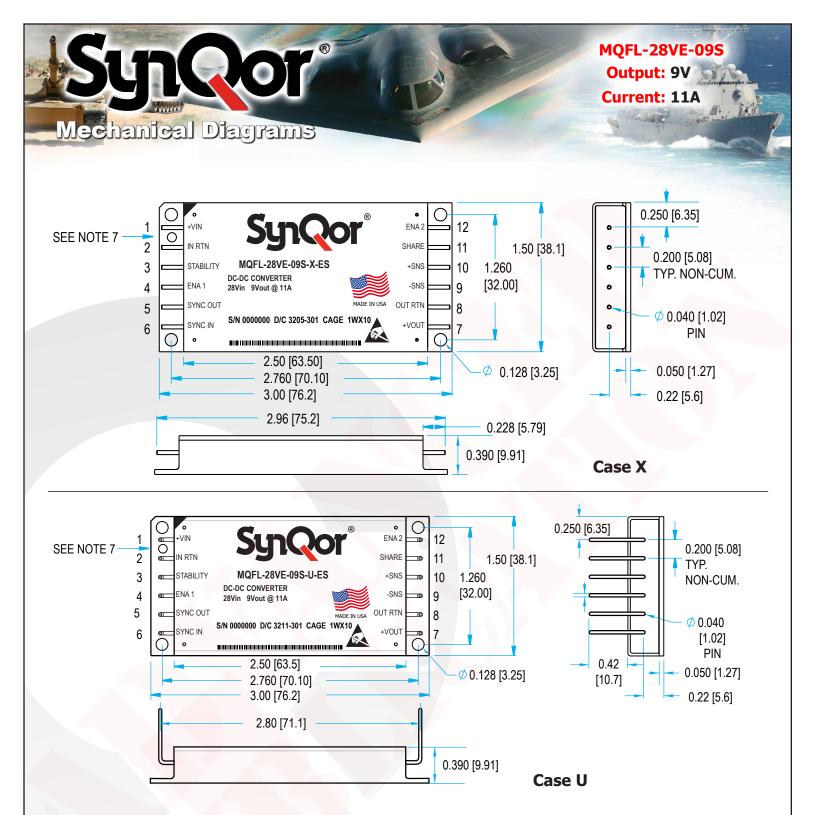


NOTES

- 1) Pins 0.040" (1.02mm) diameter
- Pin Material: Copper Alloy Finish: Gold over Nickel plating, followed by Sn/Pb solder dip
 All dimensions in inches (mm) Tolerances: x xx ± (-0.02 in (x x ± (-0.12))
- 3) All dimensions in inches (mm) Tolerances: x.xx +/-0.02 in. (x.x +/-0.5mm) x.xxx +/-0.010 in. (x.xx +/-0.25mm)
- 4) Weight: 2.8 oz (78.5 g) typical
- 5) Workmanship: Meets or exceeds IPC-A-610 Class III
- 6) Print Labeling on Top Surface per Product Label Format Drawing
- 7) Pin 1 identification hole, not intended for mounting (case X and U)
- 8) Baseplate flatness tolerance is 0.004" (.10mm) TIR for surface.

PIN DESIGNATIONS

Pin #	Function	Pin #	Function
1	Positive input	7	Positive output
2	Input return	8	Output return
3	Stability	9	- Sense
4	Enable 1	10	+ Sense
5	Sync output	11	Share
6	Sync input	12	Enable 2

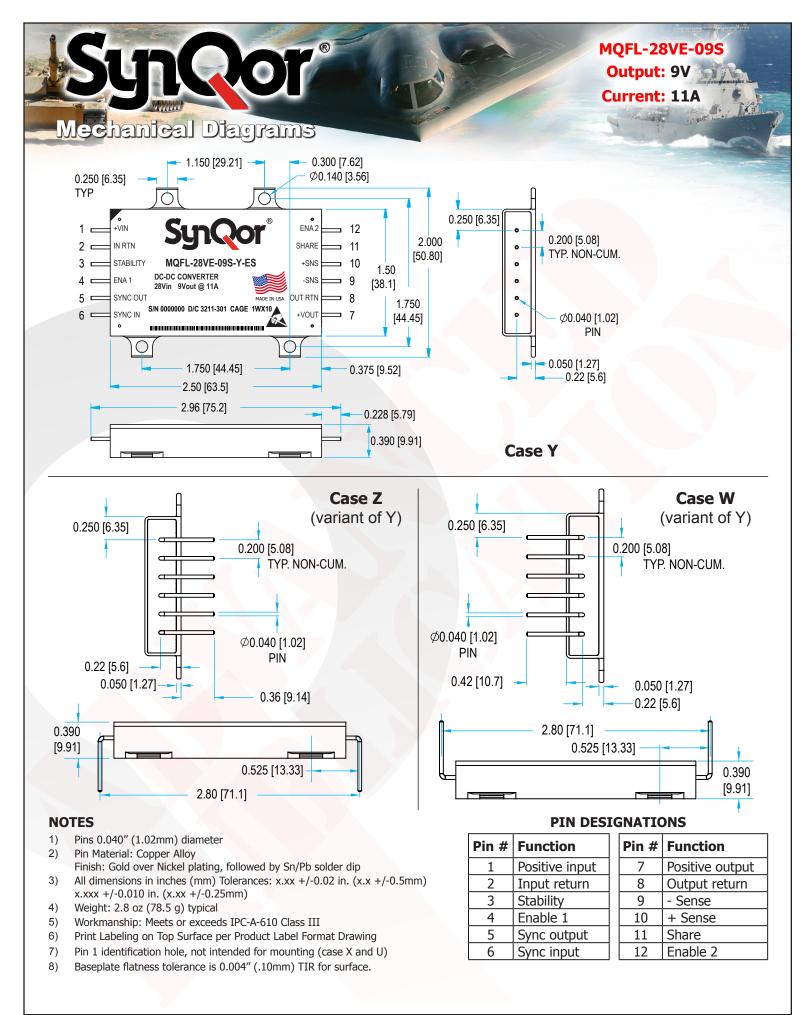



MilQor Converter FAMILY MATRIX

The tables below show the array of MilQor converters available. When ordering SynQor converters, please ensure that you use the complete part number according to the table in the last page. Contact the factory for other requirements.

					Sing	gle Ou	tput					Dua	al Outp	ut †
Full Size	1.5V	1.8V	2.5V	3.3V	5V	6V	7.5V	9V	12V	15V	28V	5V	12V	15V
MQFL-28 16-40Vin Cont. 16-50Vin 1s Trans.* Absolute Max Vin = 60V	(1R5S) 40A	(1R8S) 40A	(2R5S) 40A	(3R3S) 30A	(05S) 24A	(06S) 20A	(7 R 5S) 16A	(09S) 13A	(12S) 10A	(15S) 8A	(28S) 4A	(05D) 24A Total	(12D) 10A Total	(15D) 8A Total
MQFL-28E 16-70Vin Cont. 16-80Vin 1s Trans.* Absolute Max Vin =100V	40A	40A	40A	30A	24A	20A	16A	13A	10A	8A	4A	24A Total	10A Total	8A Total
MQFL-28V 16-40Vin Cont. 5.5-50Vin 1s Trans.* Absolute Max Vin = 60V	40A	40A	40A	30A	20A	17A	13A	11A	8A	6.5A	3.3A			
MQFL-28VE 16-70Vin Cont. 5.5-80Vin 1s Trans.* Absolute Max Vin = 100V	40A	40A	40A	30A	20A	17A	13A	11A	8A	6.5A	3.3A			
MQFL-270 155-400Vin Cont. 155-475Vin 1s Trans.* Absolute Max Vin = 550V	40A	40A	40A	30A	24A	20A	16A	13A	10A	8A	4A	24A Total	10A Total	8A Total
MQFL-270L 65-350Vin Cont. 65-475Vin 1s Trans.* Absolute Max Vin = 550V	40A	40A	30A	22A	15A	12A	10A	8A	6A	5A	2.7A	15A Total	6A Total	5A Total
Single Output									Dua	al Outp	ut †			
Half Size	1.5V (1R5S)	1.8V (1R8S)	2.5V (2R5S)	3.3V (3R3S)	5V (05S)	6V (06S)	7.5V (7R5S)	9∨ (09S)	12V (12S)	15V (15S)	28V (28S)	5V (05D)	12V (12D)	15V (15D)
MQHL-28 16-40Vin Cont. 16-50Vin 1s Trans.* Absolute Max Vin = 60V	20A	20A	20A	15A	10A	8A	6.6A	5.5A	4A	3.3A	1.8A	10A Total	4A Total	3.3A Total
MQHL-28E 16-70Vin Cont. 16-80Vin 1s Trans.* Absolute Max Vin =100V	20A	20A	20A	15A	10A	8A	6.6A	5.5A	4A	3.3A	1.8A	10A Total	4A Total	3.3A Total
MQHR-28 16-40Vin Cont. 16-50Vin 1s Trans.* Absolute Max Vin = 60V	10A	10A	10A	7.5A	5A	4A	3.3A	2.75A	2A	1.65A	0.9A	5A Total	2A Total	1.65A Total
MQHR-28E 16-70Vin Cont. 16-80Vin 1s Trans.* Absolute Max Vin = 100V	10A	10A	10A	7.5A	5A	4A	3.3A	2.75A	2A	1.65A	0.9A	5A Total	2A Total	1.65A Total

Check with factory for availability.

†80% of total output current available on any one output.

*Converters may be operated at the highest transient input voltage, but some component electrical and thermal stresses would be beyond MIL-HDBK-1547A guidelines.



PART NUMBERING SYSTEM

The part numbering system for SynQor's MilQor DC-DC converters follows the format shown in the table below.

Not all combinations make valid part numbers, please contact SynQor for availability. See the Product Summary web page for more options.

Model	Input	Output V	/oltage(s)	Package Outline/	Screening		
Name	Voltage Range	Single Output	Dual Output	Pin Configuration	Grade		
MQFL MQHL MQHR	28 28E 28V 28VE 270 270L	1R5S 1R8S 2R5S 3R3S 05S 06S 7R5S 09S 12S 15S 28S	05D 12D 15D	U X Y W Z	C ES HB		

Example: MQFL-28VE-09S-Y-ES

APPLICATION NOTES

A variety of application notes and technical white papers can be downloaded in pdf format from the SynQor website.

PATENTS

SynQor holds the following U.S. patents, one or more of which apply to each product listed in this document. Additional patent applications may be pending or filed in the future.

5,999,417	6,222,742	6,545,890	6,577,109	6,594,159	6,731,520
6,894,468	6,896,526	6,927,987	7,050,309	7,072,190	7,085,146
7,119,524	7,269,034	7,272,021	7,272,023	7,558,083	7,564,702
7,765,687	7,787,261	8,023,290	8,149,597	8,493,751	8,644,027

Contact SynQor for further information and to order:

Phone:	978-849-0600
Toll Free:	1-888-567-9596
Fax:	978-849-0602
E-mail:	mqnbofae@synqor.com
Web:	www.synqor.com
Address:	155 Swanson Road
	Boxborough, MA 01719
	USA

Warranty

SynQor offers a two (2) year limited warranty. Complete warranty information is listed on our website or is available upon request from SynQor.

Information furnished by SynQor is believed to be accurate and reliable. However, no responsibility is assumed by SynQor for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of SynQor.